

RCMS

1 clear rls infomation

clea rls infomation [port num]

```
RCMS          rcms          port
port
```

```
rcms#clea rls infomation port 1
rcms#
```

2 clear rls session

LIMP(RLS)

clea rls session [id num]

```
RCMS
LIMP          id
```

```
1
rcms#clear rls session
rcms#
2
rcms#show rls session
connect id          IP
61                 192.168.199.61
41                 192.168.201.19
rcms#clear rls session id 61
rcms#
```

3 debug rls

```
debug rls
```

```
RCMS
user:                               debug
data:
event:    LI MP(RLS)

rcms#debug rls user
rcms#
```

4 facility enable

tty

rcms

15

facility enable level *num* secret {0|7} line

no facility enable

LINE

RCMS

level *num*:

1-32,

15

```
rcms(config)#rls enable
rcms(config)#
```

6 rls ip

		LI MP	ip	LI MP IP
IP	LI MP	RCMS		
	rls ip ip			
	no rls ip			

RCMS

```
rcms(config)#rls ip 192.168.10.254
rcms(config)#
```

7 rls load-config

	RCMS	: rcms_config.ini
rls load-config		

RCMS

RCMS

rcms_config.ini

RCMS

```
RCMS#rls load-config  
RCMS load file OK!  
RCMS#
```

8 show rls command-string

rcms

↑

show rls command-string

```
Vendor :1 , type:3:
    DOWN CFG: copy xmodem flash:config.text
y    DOWN SENS: copy xmodem flash:script.text
    UP CFG: copy flash:config.text xmodem
    CLEAR CFG :copy flash:default.text flash:config.text
y    RELOAD:reload
    WAIT RELOAD:120

RCMS#
```

9 show rls infomation

```
RCMS$ tty
show rls infomation
```

```
RCMS$
tty
```

```
RCMS#sho rls infomation
RLS client socket id :0 , ip addr:0.0.0.0

PORT:0 idle
    book id:0 , user ip:0.0.0.0 , autosave interval:0
    facility type 0 , facility vendor:0
    time left:0, facility ready and not allow use

PORT:1 idle
    book id:0 , user ip:0.0.0.0 , autosave interval:0
    facility type 0 , facility vendor:0
    time left:0, facility ready and not allow use

PORT:2 idle
```

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:3 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:4 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

PORT:5 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0
facility type 0 , facility vendor:0
time left:0, facility ready and not allow use

time left:0, facility ready and not allow use

PORT:11 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use

PORT:12 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use

PORT:13 idle

book id:0 , user ip:0.0.0.0 , autosave interval:0

facility type 0 , facility vendor:0

time left:0, facility ready and not allow use